



RIGID PLANK



MAINTENANCE INSTRUCTIONS



POST INSTALLATION CARE

- When moving heavy appliances or furniture across the newly installed floor, it is recommended to use plywood panel or equivalent material to protect the floor from scuffing and gouging.
- Use proper felt or rubber floor protectors under furniture to reduce potential scratch and indentation.
- Furniture on casters/wheels must be easily turned with wide width, non-staining hard rubber wheels that are suitable for a vinyl floor. Otherwise, suitable protective mats are recommended.
- Avoid exposing floors to glowing end of a cigarette, matches or any other similar hot sources since they may create permanent burn marks and damage the floors.
- Avoid bringing dirt, and sand indoors by using a suitable non-staining backed floormat at the door.

MAINTENANCE

- Sweep or vacuum (without beater bar) the floor regularly to remove loose dirt. The frequency will depend on volume of traffic.
- All spills should be wiped up as soon as possible. Avoid using abrasive scrubbing tools/cleaners on any Rigid Plank flooring products.
- For dry maintenance, a dust mop or vacuum cleaner with a soft bristle brush only are recommended.
- For wet maintenance, use a damp mop with a diluted cleaning solution and make sure it dries completely. Avoid harsh cleaning products that may damage the floor.
- Rigid Plank products are completely waterproof, but they do not prevent the transmittance of moisture. Care should be taken to keep moisture from collecting on either side of Rigid Plank to prevent the growth of mold and mildew.

WARRANTY

The guarantee for Rigid Plank products include all manufacturing defects for 25 years for residential installations and 10 year for commercial installations (0.55mm wear layer).

Warranty period starts from the date of purchase. Warranty applies to original purchaser only. Please keep original invoice as proof of purchase.

Manufactured by

